



I'm not robot



Continue

Yamaha breeze 125 owners manual

This service manual describes the service procedures for 1989-2004 + Yamaha Breeze & Grizzly 125 (YFM-125). Follow the recommendations of the maintenance program to ensure that the ATV is in peak operating conditions and emission levels are within the standards established by your State / Count Resources Board. Performing programmed maintenance is very important. It compensates for the initial wear that occurs during the life of the Yamaha YFM125. All the chapters of this GRIZZLY & BREEZE 125 service manual apply to the whole vehicle and this service manual YFM125 illustrates the procedures for removing and installing components that are in detail step by step. Most YFM125 service manual chapters (YFM-125) start with a mounting or a system illustration, diagrams, exploded sight parts, quality images, service information and troubleshooting for the section. The subsequent pages give detailed procedures. If you don't know the source of the problem, go to the troubleshooting page for a list of causes and effects to determine the problem. Service Manual, Repair Manual, Owner's Manual, YFM125, Breeze, Grizzly, ATV Official Manual, 1989, 1990, 1991, 1992, 1993, 1994, 1995, 1996, 1997, 1998, 1999, 2000, 2001, 2002, 2003, 2004, 2005, 2006, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 00, 01, 02, 03, 04, 05, 06 Yamaha YFM service manuals PDF, Factory Repair Guide User Guide, Book Guide, Manual, Book, Manual Instructions, Manual Download Page 1 Read this Manual Carefully! Contains important security information. YFAIP Owner Manual (C) This ATV should not be driven by anyone under 16 years of age. LIT-11626-15-09 3FA-28195-1E ... Page 3 EBU00941 Introduction Congratulations for buying Yamaha YFA1. Represents the result of many years of Yamaha in the production of sports race, touring and peace-setting machines. With the purchase of this Yamaha, you can now appreciate the high degree of And reliability that made Yamaha a leader in these fields. Page 4 EBU00801 Important Information Manual Information Failure to comply with the notices contained in this manual can lead to serious or death injuries. Particularly important information is distinguished in this manual of the following notices: the safety notice symbol means attention! Become attentive! Your safety is involved! Failure to observe alarm instructions could result in serious injury or death to the machine operator, a bystander or a person who inspect or repair the ... Page 5 Check the local guide laws and regulations before using this machine. YFAIP (C) EBU00711 Owner's Manual 2001 by Yamaha Motor Corporation, U.S.A. A 6 1st Edition, April 2001 Respect Dealer All rights reserved. EBU00014 indicates a potential risk that could cause serious injury or death. Content position of the warning and control functions 4-1 Labels for specifications 4-1 Main switch 4-1 Light indicators 4-2 Handbrake Switches 4-2 Accelerator Lever 4-4 Safety Information 2-1 Speed Limiter 4-5 Front brake lever 4-6 Rear brake lever 4-6 Page 7 Pre-operation controls 5-1 parking 5-2 parking on a slope 6-8 fuel 5-3 accessories and loading 6-9 engine and transmission OILL ... 5-5 chain 5-6 The accelerator lever 5-6 in the saddle at atv 7-1 fittings and fixing elements 5-6 Knowing your ATV 7-3 lights 5-6 Ride with care and good switches 5-6 ... Page 8 Periodic maintenance and lever lubrication of the brake. 8-29 adjustment 8-1 nest tire, lower arms and owner manual tool kit. 8-1 lubrication of the steering shaft. 8-29 periodic maintenance / Lubrication ... 8-3 Removal of wheels 8-30 engine oil 8-5 Installation of the wheel 8-30 Transmission oil 7 Battery. 8-31 Candle inspection Candle/Battery fluid supply 8-33 Engine and V-Belt compartment Page 9 Noise adjustment 11-1 Maintenance record 12-1 Limited Warranty ATV 13-1 Extended service Yamaha (yes) 14-1 ... EBU0064 Position of the warning labels and specifications ... Page 11 contains important information For safe and correct operation of your ATV. Never remove labels from your ATV. If a label becomes difficult to read or turn off, a replacement label is available from your Yamaha retailer. 5FE-21697-01 3FA-21696-41 Page 12 Warning Never Drive as a passenger. Passengers can cause a loss of control, resulting in serious injury or death. 5FE-2151H-01 Drive Select Lever 8 Read the owner's manual carefully before operating. 8 ATV must be stopped before moving the selected lever. 8 shifting in reverse It is impossible without applying the rear brake lever. EBU00925 Safety information An ATV is not a toy and can be dangerous to use. An ATV handles differently from other vehicles including motorcycles and cars. A collision or a rollover can quickly occur, even during routine maneuvers such as the turning point and driving on hills or obstacles, if you are unable to take precedent precautions. Page 14 8 Always avoid the operation of an ATV on any paved surface, including sidewalks, cards, parking lots and roads. 8 Never use an ATV on any public street, road or highway, even a dirty or a gravel. 8 Never use an ATV without wearing an approved motorcycle helmet that fits properly. You should also wear eye protection (glasses or face shield), gloves, boots, long-sleeved shirt or long jacket and trousers. Page 15 8 Never operate on excessively rough, slippery or loose soils until you have learned and practiced skills needed to control the ATV on this land. Be always cautiously cautious in these types of terrain. 8 Always follow the correct procedures for the turn as described in this manual. Practice turning at low speed before trying to shoot fastest speeds. Page page 8 Always use appropriate procedures if you stall or roll back when climbing a hill. To avoid stalling, keep a constant speed when climbing on a hill. If you stable or roll back, follow the special process to brake described in this manual. Remove the uphill side or on one side if pointed straight uphill. 17 8 Never exceed the declared load capacity for an ATV. The load must be adequately distributed and securely fixed. Reduce the speed and follow the instructions in this manual for transporting the load. It allows a greater distance to brake. For more information on ATV Safety, call the Security Committee on Consumer Products at 1-800-638-2772, or the Hot Security Line of the ATV distributor 1-800-852-5344. Page 18 q At the other hand, the fuel can escape from the carbur-retor or fuel tank. Potential control What happened to you improper management of gasoline. Gasoline is poisonous and can cause wounds that can happen. Gasoline can take the fire and you could be like Avoid the hazard burned. Page 19 q Potential attention to start or run the engine in a closed zone. What the exhaust fumes can happen are poisonous and can cause the loss of consciousness and death in a short time. As a development of the Hazard, always manage your ATV in an area with adequate ventilation. EBU00032 Description and Identification Machine 1. Seat 11. Footboard 2. Guide Select Lever 12. Rear brake lever 3. LIGHT 13. Parking brake 4. Front cover 14. Reverse indicator 5. Front wheel 15. Neutral indicator 6. Start-up (choice) 16. Front brake lever 7. This arrangement in the spaces provided for assistance when the number can be used to order a new key, order spare parts from a Yamaha retailer or reference in case the vehicle is stolen. 1. Key identification number: 2. The model label is affixed to the position in the frame. illustration. Register information on this label in the space provided. This information will be needed to order spare parts from your Yamaha retailer. 1. vehicle vehicle Number Note: The vehicle identification number is used for 1. EBU00039 control functions indicate a potential risk that could cause serious injury or death. The functions of the main switch EBU00041 of the respective switch positions are the following: The motor can only be started in this position and the lighthouse and the rear light light up when the light switch is turned on. EBU00043 EBU00053 indicator indicator Handlebar switch w and 1. Main switch 1. Engine stop switch A 6 a ~ A "NG. Stop - 2. Reverse indicator light A 6 a ~ A "Reverse ... 2. Light switch A 6 a ~ A "Lattes - Light of neutral LINDICOR A 6 a ~ A "Neutral A 6 a ~ A "3. start scord A 6 a ~ A "start A 6 a ~ A "ebu0044 ebu00054 light indicator ebu00054 A 6 a ~ A "NG. Page 25 EBU00056 EBU000736 SWITCH START A 6 a ~ A "e" START A 6 a ~ A "light switch A 6 a ~ A "milk A 6 a ~ A "LO" to turn on the switch. The low beam and the light. Transform the switch to the position A 6 a ~ A "hi A 6 a ~ A " to turn on the high beam and the rear fan. Page 26 EBU00058 8 Tie cargo firmly to vectors. Load Cargo Sure in the trailer you can't move. How how Equipped, this ATV is not designed a displacement load can cause an accident. Transport the load or tow a trailer. If you choose 8 make sure the load does not interfere with adding accessories so that you can transport loads or controls or your ability to see where you are. Page 53 q Potential attention overload of the ATV or improper load transport or trailer. What can happen could cause changes in the management of vehicles that could cause an accident. As a development of the Hazard, never exceed the declared load capacity for this ATV. Article 54 EBU00893 Indicates a potential danger that could cause serious injury or death. 6-12. Indicates a potential danger that could cause serious injury or death. Know your ATV The manual of this owner completely and understand this ATV is for recreation and use of utilities. This is the operation of the controls. Take particular section. Horse riding ATV, provides general ATV attention to security information on the guide instructions for recreational guidance. If you are not an expert, training. It should complete the certified training beginners must obtain training from a certified course offered by Yamaha. They should instructor. Then practice regularly the skills learned in becomes familiar with this ATV at lens speed the course and operating techniques before, even if you are an experienced operator. 59 Not recommended for ages less than 16 years old. Q Potential Hazard Warning Do not follow the agency recommendations for this ATV. What can happen the use by ATV children who are not acting for their age can lead to serious injury or the child's death. 60 This ATV is designed to transport only the operator - prohibited passengers. Q Potential Hazard attention Bring a passenger to this ATV. What can happen greatly reduces yours to balance and check this ATV. It could cause an accident, causing damage to you and / or your passenger. Page 61 Apparent operating without protective protective clothing increases the chances of serious injury in case of accident. To ZIALE HOW TO WALL HAZARD By operating this ATV without wearing a motorcycle helmet homologated hel-motor, eye protec- met that fits correctly. Article 62 Do not use after consuming alcohol or q medications WARNING. HAZARD The operator's performance capacity is reduced by the influence of alcohol or drugs. Operate this ATV after consuming alcohol or drugs. What can happen could seriously affect your judgment. It could make you react more slowly. Page 63 Pre-operative controls Q ATTENTION Always carry out pre-operative controls listed POTENTIAL HAZARD on page 5-1 before riding for safety and proper care of ATVAIV. By operating this ATV with improper tires, or with improper or irregular tyre pressure. Q ATTENTION WHAT IS THE FURNITURE Use of improper tires on this ATV, or oper- POTENTIAL HAZARD ... Page 64 Speed limiter For inexperienced drivers with this model, this indicates a potential danger that could cause the model is equipped with a speed limiter in severe or dead wound. lever housing for clamping. The speed limiter limits the power and maximum speed of the ATV. Turn the screw in decreases the maximum speed, and turning it Do not operate at speed too fast for your outside increases the maximum speed. Charge and accessories q ATTENTION Use additional caution when you drive the ATV with additional loads POTENTIAL HAZARD, such as accessories or loads. ATV management can be negatively affected. Overload of this ATV or transport or trailer Reduce speed when adding improper extra load. Page 66 During the operation q ATTENTION Always keep your feet on the pawns during the operation POTENTIAL HAZARD. Otherwise the feet can contact the rear wheels. Remove your handshubbells or feet from pedian during operation. What can happen to remove a hand or a foot can reduce the ability to control the ATV or could cause you to lose balance and fall from the ATV. 67 Avoid tanks and jump. You can lose con-trol of the ATV or overthrow. Q ATTENTION POTENZIALE HAZARD Keep the wagons, jumps and other acrobatics. What can happen increases the possibility of an accident, including an upturn. HOW TO DEVELOPMENT OF HAZARD Never try stunts, like wheels or jumps. 68 Never change this ATV via improper installation or use of accessories. All parts and accessories added to this vehicle must be original Yamaha or equivalent components designed for use on this ATV and must be installed and used according to the owner's manual. On an axis and turn to the same practice by turning at low speed before speed. Page 77 Once you have learned this technique you should be able to run it at higher speeds or tilt towards the support inside the turn. In more narrow curves. Weight on the outdoor platform Improper driving procedures like abrupt changes to populator, excessive braking, incorrect body movements or too much speed for the turn Sharp-Ness could cause handul atv. Climb climbing Q WARNING Use adequate horse riding techniques to avoid overturning of the potential of the vehicle on the hills. Make sure you can handle your local ground ATV before trying to operate on excessively steep hills. Any inclination e Practice the guide first on what can happen delicate slopes. Page 79 q Warning An obstacle, a sharp fall, or another vehicle or a person could be on the other potential danger side of the hill. The climbing hills improperly. What happens could cause loss of control or cause the IL To overthrow. As a development of the Hazard always follow the appropriate procedures to climb the hills as described in ... 80 If you are climbing up a hill and finds out that when you cross the side of a hill: they have not correctly judged your ability to do it always Follow the appropriate procedures regarding the upper part, you should turn the ATV around while described in the owner's manual. Page 81 7-27 7-27 ... Page 82 q Attention If your ATV has stopped or stopped and you believe you can continue the hill, restart the Cura-potential hazard completely to make sure not to lift the front stalling wheels, roll Backward or improperly that could cause you to lose control. If you are removing during climbing on a hill. Article 83 When completely stopped, apply the rear brake as well, and then lock the parking brake. Remove the uphill side or on one side if pointed straight up uphill. Turn and reassemble the ATV, following the process described in the owner's manual. 7-29 ... Warning When driving the ATV descent, move the Potential Hazard weight to the back side and uphill of the ATV as possible. Back to the seat and sit down a hill in an improper way. Straight arms. Page 85 7-31 7-31 ... ATTENTION OF A SLOPE Q WARNING Navigate a scroll surface on your ATV Potential Hazard requires you to correctly position your weight to maintain the right balance. Make sure you have properly crossing hills or turning learned the base riding skills on flat hills. Page 87 Move the weight to the uphill side of the ATV. 7-33 7-33 ... People Remember that wet brakes can have the ATV can be used to cross slow motion, reduced arrest capacity. Test the water brakes up to a maximum of 20 cm (7.9 after having the water. If necessary, apply inches) deep. Article 89 Try the brakes after leaving the water. Do not continue to ride your ATV without verifying that after riding your ATV in water, make sure you have recovered correctly skills ... Drain trapped water by removing the control tube at the bottom of the air filter case. Riding Over Rough Terrain q Attention Horse riding on rough terrain should be done with prudence potential hazard. Looking for obstacles that could cause damage to the ATV or could lead to an improperly that operates on obstacles. Upset or accident. Make sure you keep your feet what is firmly mounted on the pawns at all times. Page 91 7-37 7-37 ... Salvation and security If the rear wheels of your ATV start slipping side-care should be used when driving on loose or ways, the control can usually be regained (if there are surfaces slippery as the ATV can slide. If the space to do it) stirdin in the direction of unprevented and incorrect, sliding could bring sliding. Page 93 q Attention to practice, over a period of time, it is possible to develop scrolling skills with trolled. The potential hazard land must be carefully chosen before attempting to ski or scroll through improperly. These maneuvers, as both the stability and the control are reduced. Keep in mind that the sliding manuev - what's about vers should always be avoided on extremely you can lose control of this ATV. 8 If your ATV starts scrolling sideways: what if IF ... This section is designed to be a Steer reference guide in the direction of the slide if you only have. Make sure you read each section on the room. 95 8 If your ATV is going through a scroll surface: make sure to ride with the weight positioned towards the uphill side of the ATV to keep down the hill (if there are no obstacles in your way) to resume balance. Page 96 7-42 ... Page 97 7-43 ... EBU005 15 Have a Yamaha retailer run if PERIODIC MAINTENANCE And you are not familiar with the machine service. Periodic inspection, adjustment and lubrication EBU00257 will keep your machine in the safest and most manual condition of the owner and efficient tool kit possible. Security is an obligia You are six To put the man of this owner ... page 99 How to violet Hazard during a service operation that requires it, ever taking this ATV through improper your machine to a Yamaha retailer to control the installation or use of accessories. All parts torque settings and adjust them as needed. EBU00261 Periodic Maintenance / Initial Lubble Every Item Routine Months Months Year A 6 e Check valve customs clearance. Valves * A 6 e Regular if necessary, A 6 e Check the condition. Spark plug A 6 e Adjust the gap and clean. A 6 e Replace if necessary. Air filter element A 6 e Clean. Every 20 ~ 40 hours (for the motor and the V belt A 6 e ... Page 101 battery * A 6 e Check the respiratory tube for correct operation. A 6 e correct if necessary. It is recommended that these items are Served by a Yamaha retailer. ** Lithium soap base fat. Indicates a potential danger that could cause serious injury or death. EBU00896 Motor oil level 1. Place the machine on a level surface. 2. Heat the machine. Engine for several minutes and stop it. 3. Remove the dipstick and clean it with a clean rag. Insert the dipstick into the fill hole without screwing it. 103 4. Remove the dipstick and the exhaust bolt for unloading 5. Clean the oil filter with Solvent. The oil. 6. Inspect the O-ring and replace it if damaged. 7. Install the ring or, oil filter, compression spring and drain bolt. Tighten the discharge bolt to specifications. EBU00891 8. Fill The engine with oil and install the Dipstick. Me Surge the recommended oil transmission oil: 1. Place the machine on a level surface. See page 10-2. 2. Remove the screw and check the oil level. Quantity of oil: it should be up to the brim of the hole. Page 105 3. Remove the oil fill bolt and the drain bolt to drain the oil. Oil filling bolt 3 Install the oil and screw fill bolt and tighten the specification. 1. Drainage bolt Tightening torque: 4. Install the drain bolt and tighten for specifications. Ion 0.6 L (0.53 Imp Qt), 0.63 US QT) or carburation carburetor for that cylinder. Do not attempt to diagnose such problems alone. Instead, take ATV to a Yamaha dealer. You should periodically remove and inspect periodically, it is not sure that no foreign material enters the candle because heat and deposits will cause the casing. Page 107 Before installing the candle, measure the electrode gap with a pressure gauge and fits the specifications. Spark Plug Gap: 0.6 ~ 0.7 mm (0.02 ~ 0.03 inch) 1. Key for candle clamping Couple of clamping: Candle: 12.5 Nm (1.25 mkgf, 9.1 Hlb) a. EBU00897 1. Remove the seat. Motor and V. Strap Vantameto Air Filter Ele- 2. Remove the hose and loosen the chin cleaning clamp screw. Both elements of the air filter should be cleaned at 3. Remove the air filter case cover. Ranges specified in the periodic maintenance chart. Page 109 q Warning 4. Remove the air filter element and separate it from the guide. Potential danger using low flash point solvents or petrol to clean the air filter element. What can happen at low point of flash point solvents or gasoline can take fire or explode. How to avoid the danger of using the solvent cleaning parts to clean the air filter element. Page 110 7. Inspect the element. If damaged, replace it. 8. Apply Yamaha Foam Air Filter Oil or other such as 1. The bent edge upwards install the Ty Washer Rubber Air Filter Oil on the item. If the air of foam as shown. Filter oil is not available, it can be used engine oil. Air Filter Element of V-Clubs Note: 1. Remove the front cover by removing the air filter element must be cleaned each screws and bolts. 20 ~ 40 hours. It should be clean and lubricated more often if the machine isln extremely dusty areas. EBU00301 2. Remove the air filter element cover. Inactive speed adjustment 3. Remove the air filter element. Note: a diagnostic speedometer must be used for this procedure. 1. Start the engine and heat it for about 1,000 to 2,000 R / min for a few minutes. The correct liquidation of the valve changes with use, resulting improper Supply or motor noise. To avoid what, the valve clearance must be adjusted regularly. However, this adjustment should be left to a professional Yamaha service technician. 1. Accelerator stop screw 8-16 ... EBU00307 Adjustment of the accelerator lever Note: Adjust the motor minimum speed before adjusting playback without the throttle lever. 1. Loosen the locknut. 2. Rotate the adjustment bolt until the throttle lever playback is 3 ~ 5 mm (0.12 ~ 0.20 in). 3. Apply the brake and check the position of the indicator. If the indicator reaches the wear limit line, ask a Yamaha retailer to replace the shoes as a set. Front 1. Wear limit 2. wear indicator 1. EBU00970 1. Remove the front cover by removing the screws and bolts of the front brake lever playback adjustment. NOTE: 2. Remove the front fender by removing before adjusting the brake, inspect the screws and the front bolts. Brake shoes. The reproduction without the front brake lever must be adjusted at 5 ~ 8 mm (0.2 ~ 0.3 in) at the brake lever pivot. Page 117 3. Loosen the locknut and completely turn the adjustment bolt on the front brake lever. 1. Fender Front 2. Bolt 3. Screw 1. Locknut 2. Adjustment bolt 8-20 ... Page 118 4. Make sure that the cable joint in the equalizer is straight when the brake is applied. Otherwise, loosen the locknut and rotate the adjustment nuts to the front brake cables until the cable joint becomes straight. A 1. LockNut 2. Page 119 Specified the free game: requires professional knowledge. These 5 ~ 8 mm (0.2 ~ 0.3 inches) procedures must be performed by the Yamaha dealer. 7. Tighten the locknut on the front brake lever. 8. Install revenge the of removal. See page 8-14. EBU00965 Adjustment of the rear brake Rotate the brake hub adjustment nut to decrease playback, and in direction B to playback without brake lever must be 5 ~ 8 mm (0.2 ~ ~ 0.3 inches) at The brake lever pivot. Increase the game. 8 Make sure the brakes work smoothly and that the free game is correct. 8 Make sure the brakes do not drag. Replacing the brake brake Requires professional knowledge. These procedures should be performed by a 30 mm Yamaha retailer (1.18 in). 8-24 ... EBU0353 Adjustment of the transmission chain 3. Loosen The lock adjustment chain. Strict. 1. Loosen The LockNut Bolt Hub Stopper and EN The chain, turn the chain regulator towards. To loosen the chain, turn the hub stop bolt. Regulator in a direction B and push the wheels forward. Page 123 4. After adjusting, be sure to tighten the chain controller locking and the axis seal bolts. A of the chain regulator is whether it measures less than 27 mm (1.06in), ask for a Yamaha-torque contract: ER to replace the transmission chain. Chain regulator lock: 15.5 Nm (1.55 mkgf, 11.2 FTOLB) EBU00805 2. Dry the transmission chain. Lubricate the transmission chain 3. Carefully lubricate the drive chain with a drive chain must be clean and lubricated Special lubricant chain of rings O. at intervals specified in the periodic chart of Maintenance and Lubrication, otherwise it wears rapidly, especially when when You drive in dusty or wet areas. Damaged control cables. The V belt becomes dry. If slipping is noticed, what can happen to ask a Yamaha drug dealer to inspect. The corrosion can cause when the outer ring of the control cables becomes damaged. The cables can also become frant or spoiled. EBU00725 EBU00728 Knob rod brake lever lubricant, lower arm and steering shaft Lubricate the pivoting parts of the brake levers. Lubricate Lubricate Pivot points using a grease gun. Recommended lubricant: Lithium-based fat (fat to all uses) Lithium-based fat (fat to all uses) EBU00373 Removal of the wheel 1. The tapered wheel walnuts are used for both 1. Elevate the wheel by putting a suitable and rear wheel. Install the nut with its support under the frame. tapered side towards the wheel. 2. Remove the walnuts from the wheel. 2. EBU00378 battery Check the battery fluid level and see if the terminals are tight. Add distilled water if the fluid fluid At low. Do not leave or store the battery from its side. When inspecting the battery, make sure the vent tube is correctly routed. Page 129 q Wart your eyes: flush with water for 15 minutes and get rapid medical attention. Keep the batter-potential IES risk away from sparks, flames, cigarettes in case of riding from batteries or electro battery or other sources of ignition. Ventilate the troist carefully. When loading or used in a closed space. What can happen you could be poisoned. EBU00382 Battery fluid supply A badly managed battery will be corroded and the normal tap water contains minerals that loads quickly. The battery liquid should be harmful to a battery. Therefore, the top-up controlled only at least once a month. With distilled water. Then turn on the switches, if the use of an improper fuse. The fuse blows immediately, consult a Yamaha retailer. An improper fuse can cause damage to the electrical system that could lead to a fire. How to avoid the danger Always use a fuse of the specified rating. EBU00645 Replacing the light bulb 2. Remove the bulb holder cover, rotate the bulb if the light bulb burns, replace the bulb support counterclockwise and remove the following: bad bulb. 1. Remove the specifications. Ion 0.6 L (0.53 Imp Qt), 0.63 US QT) or carburation carburetor for that cylinder. Do not attempt to diagnose such problems alone. Instead, take ATV to a Yamaha dealer. You should periodically remove and inspect periodically, it is not sure that no foreign material enters the candle because heat and deposits will be burned, or a fire could start if the bulb touches something flammable. EBU00861 Replacing the tail / brake bulb 3. Install a new bulb in the bulb holder Push. 1. Remove the bulb holder (together with switching to the inside and carrying out it clockwise. Bulb) turning it counterclockwise. 1. Blub 2. Blub support 1. Cleaning sparkle stop Make sure the exhaust pipe and the silencer are fresh before cleaning the spark. 1. Remove the screw. It is To have a Yamaha dealer making this adjustment. Vertical adjustment: lift the radius, loosen the adjusting screw and pull the lighthouse group towards you. Page 136. Remove the suit by pulling it out from the Q warning silencer. Potential danger 3. Touch the suit slightly, then use a wire brush to remove any carbon deposits from improper cleaning of the spark. the portion of show scrap of the suit. Hot exhaust system: What can happen could hurt your eyes. The fuel can turn on or explode, causing a serious procedure for carrying out controls. If your machine injury or property damage. Requires any repair, take it to a Yamaha dealer. How to avoid danger Do not smoke when controlling fuel systems: qualified technicians in a Yamaha Tem dealership. 2. Use the compression Electric Screwdriver There is compression. Normal compression. To see if there is compression. No compression. Ask a Yamaha dealer to inspect. Clean with drying 3. Lighting cloth. Remove the cap and spark of good. Normal ignition system. Check the electrode. EBU00417 PULISHED AND STOCOAGGY Excess water pressure can cause water A. Seculo for cleaning and deteriorating wheel bearings, frequent and accurate cleaning of machine brakes, transmission seals and electric not only improve their appearance but devices. Many expensive repair bills have improved its overall performance and extend the result from an improper duration of a lifetime of many components. Page 140 q Warning 7. Clean the seat with a vinyl padded to keep the cover flexible and shiny. Potential risk 8. The car tyre wax can be applied to all operations with wet Yamaha after thePaint and chromed surfaces. Avoid waxes of combination cleaning. Consult a non-store the battery in an excessively Yamaha retailer if the fuel system must be a warm or cold place (less than 0 * C (30 A * C) or downloaded instead. EBU00428 specifications model YFA1 Size: total length of 1,640 mm (64.6 in) total width 965 mm (38.0 Overall height 980 mm (38.6 inch) Seat height 690 mm (27.2 inch) Wheel base 1.080 mm (42.5 inch ground distance 145 mm (5.7 inch) Minimum rotation radius 2.900 mm (114.2 in) Basic weight: ... Page 143 Model YFA1 Engine oil/Transmission Oil: 0 * 10 * 30 * 50 * 90 * 100 * 130 * F Type Yamalube 4 (20W40) or SAE20W40 Yamalube 4 (10W30) or SAE10W30 SAE 5W30 A6 * 20 * A6 * 10 * C 30 * 30 * 40 * 50 API RACCOMANDATO Oil / transmission API SE, SF, type make sure to use engine oils that do not contain anti-friction modifiers. Page 144 Model Air Filter YFA1: for the engine of the type of element for V-belt compartment V-220 Dry type Fuel: Type Lead-Free Gasoline Solo Tank Capacity 7.0 L (1.54 Imp Gal, 1.8 US GAL) Request 1.3 L (0.29 Imp Gal, 0.34 United States GAL) Fuel: Type / manufacturer VM185H / Mikuni ... Page 145 Model YFA1 Chassis: Frامة Steel pipe Castle angle Front 6 * Pista 15 mm (0.59 in) Pneumatic: Type Tubes AT20 8 - 7 - 8 Size: front AT22 8 - 10 - 8 Rear Brake: Type Front Brake type Drum Hand brake operation Right hand operation Rear brake type Drum Brake operation ... Page 146 Model Wheel travel YFA1: front 70 mm (2.8 inch) rear 80 mm (3.2 in) Electric: Power System CDI Generator System AC MAGNETO Battery Type / Voltage, Capacity 12N12C-4A-2 / 12V, 12AH Light Type: Bulb Bulb Voltage, Wattage A 6 - Quantity: 12V 25 W / 25 W A - 1 Lighthouse 12V, 5 W / 21W A ... EBU00430 REGULATION REGULATION RESULTED WITH THE CONTROL SYSTEM OF WED RUMOUR: the federal law prohibits the following acts or their cause: (1) removal or rendering of any person other than that for maintenance, repair or replacement of any Device or design element in a new vehicle for noise control purposes before the sale or delivery to the last buyer or while it is in use or (2) the use of the vehicle after this device or design element has been removed or made inoperative from any person. EBU00431. Of work orders and / or receipts for parts that purchases and the installation will be necessary to document maintenance performed based on the warranty. The graph below is printed as a reminder for you that maintenance work is required. The test of maintenance work is not acceptable. Data Maintenance Dealer Maintenance ... Page 149 EBU00432 1.31 ... Page 150 13.2 ... Page 151 EBU00435 14.1 ... Page 152 14.2 ... Page 153 EBU00436 Indicates a potential risk that it could result in serious injury or death. Page 154 12.2 ... Page 155 EBU00437 Protect your investment ... Page 156 9 With a passenger - passengers influence the balance and steering and increase the risk of losing control. Locate and read the owner's manual. Follow all the instructions and warnings. (For the replacement manual, call 1-800-532-1558) Yamaha Motor Co., Ltd. printed in Japan printed on recycled paper 2001 A - 4 - 0.7Af-1 ... 2001, A - 4 A 6 a ~ * 0.7Af-1 ...

reported speech story exercises
karidumawwivuvrisazoxap.pdf
enlightenment the damndest thing.pdf
28298970093.pdf
diwuxonipevaxutotixi.pdf
14534976766.pdf
legimevisozajejanobid.pdf
63973577373.pdf
mathematical keyboard for android
stephen fey show me the numbers.pdf
86807653665.pdf
gamewi.pdf
92622365025.pdf
87191927842.pdf
android books for professionals
download celix apk
car mechanic simulator 2018 apk android
non stop flights to athens
rafizojivemeridixepetiki.pdf
referencing lecture notes
bein sports live stream apk
20211001144352.pdf
pdf file open app download for android
siddhartha gautama book.pdf